

## What is Movies on Demand?

- Watch movies – whenever you want.
- Start at the touch of a button and pause, fast forward and rewind just like a VCR.
- Pay only for the movies you choose and get all-day access – so you can watch each movie for up to 24 hours.
- Choose from hundreds of choices in New Hits, Classic Hits, and Adult titles. There's always a huge selection.
- New movies are added every week.
- Titles are always in-stock, and there are no late fees.

## Find a Movie

1. Tune to **Movies on Demand**. Enter the channel number directly on your Digital Remote, and press **SELECT**. Check your **Channel Lineup** for the channel number.
2. If you don't know the channel number, you can find it by browsing the **Navigator Interactive On-Screen Guide**. Press **GUIDE** to bring up the Navigator interactive on-screen guide. Then press the **UP** or **DOWN** arrows to find the **Movies on Demand** and press **SELECT**.
3. Use the **LEFT** and **RIGHT** arrows to scroll through the Movie categories. Choose from Action, Comedy, Family, and more.
4. Use the **UP** and **DOWN** arrows to select a movie. When you highlight a movie, a brief description and the cost of the movie will appear automatically.
5. If you want more information about a movie, press **SELECT**.
6. To return to the main menu, press **C**.

## Buy a Movie

1. When you have choose a movie, press **B** to buy the movie.
2. You will be asked to confirm your purchase – this prevents accidental purchases. Press **B** to confirm.
3. If you have set up Purchase Protection, or Parental Controls, and the movie you have selected is restricted, you will be asked to enter your PIN number to confirm your purchase.

Click to learn more about **Blocking Programs with Parental Controls** or **Purchase Protection**.

## VCR/VOD Option

1. Before you start watching, make sure the **VCR/VOD** option on your Digital Remote is set to **VOD** – that stands for video on demand.
2. Some Digital Remotes have a switch; others a button. If your Digital Remote has neither, it will work automatically – you don't have to change anything.

## Watch the Movie

1. Press **PLAY** to start the movie.
2. You can pause, fast forward and rewind the movie using your Digital Remote.
3. You can stop the movie and pick up where you left off for up to 24 hours.
4. To resume playing where you left off, press **PLAY**. To restart the movie from the beginning, press **A**.
5. You can also change channels to watch regular TV or even turn it off. Your movie will be available for you to watch when you return.

– continued –

— continued —

## Return to Your Movie Later

1. To return to your movie later, tune to **Movies on Demand**. Then use the **LEFT** or **RIGHT** arrows to select the **Purchased** category at the bottom of the screen.
  - You will see a list of your current purchases.
  - A small **Paid** ticket symbol appears next to each movie that you have ordered.
  - You will also see the time you have left to watch the movie.
2. Press **PLAY** to watch from where you left off. If you want to restart your movie from the beginning, press **STOP** and then **A**.

## Featured Movies

1. Each month, as soon as the top hit movies become available on iCONTROL, they are featured on the **Navigator interactive on-screen guide** on their own channels. This allows you to find the new releases quickly, without browsing the full Movies on Demand menu.
2. Press **GUIDE** to view the **Navigator interactive on-screen guide**. Now locate the **Movies on Demand** channel. Next to this, you'll find each of the current featured movie titles.
3. When you press **SELECT**, you'll go straight to the **Purchase** screen. From here, follow the **instructions for buying the movie**.