

## What is Purchase Protection?

- Purchase Protection allows you to prevent others from ordering Pay Per View or iCONTROL Programs without your permission.
- You do this by setting up a purchase PIN number that must be entered before any purchases are made.

## Setting up Purchase Protection

1. Press **SETTINGS** on your Digital Remote to display the **Quick Settings** menu, and then press **A** to display the **General Settings** menu.
2. Press the **UP** or **DOWN** arrows to find Purchase PIN.
3. If you have not yet set up Purchase Protection, you will see that the Purchase PIN is **Disabled**.
4. Press **SELECT**.
5. Press the **UP** or **DOWN** arrows to choose **ENABLE** and press **SELECT** again.
6. Enter your 4-digit PIN number when prompted.

**Tip:** If you have not set up a PIN Number for Purchase Protection, the default number is usually **0000**.

**Note:** You have a separate PIN Number for Blocking Programs and Purchase Protection. Although the default for both may be **0000**, changing one does not change the other. You have to change each of them separately.

7. Press **A** to accept your choice. Your Purchase PIN is now enabled and all purchasing requires PIN entry.

8. Press **EXIT** to return to watching TV.

**Tip:** We recommend you change the PIN from the default **0000** to something unique that you can remember. For added security, it's a good idea to change your Purchase PIN on a regular basis. To learn about **Changing Your PIN Numbers**, read that tutorial. If you forget your PIN number, or the the default is not **0000**, call Customer Care and they will help reset your PIN number.

## Disabling Purchase PIN

1. Press **SETTINGS** on your Digital Remote to display the **Quick Settings** menu, and then press **A** to display the **General Settings** menu.
2. Press the **UP** or **DOWN** arrows to find **Purchase PIN**.
3. Press **SELECT**.
4. Press the **UP** or **DOWN** arrows to choose **ENABLE** and press **SELECT** again.
5. Enter your 4-digit PIN number when prompted.
6. Press **A** to accept your choice. Your Purchase PIN is now disabled and purchasing does not require PIN entry.
7. Press **EXIT** to return to watching TV.