

Once you have activated Parental Control, you may want to turn it off at times. This way you can access the shows you want when your kids aren't watching.

### Unblocking When You Want to Watch a Show

1. If you tune to a show that has been blocked, you will see a Parental Control Alert. The alert shows you whether the program is blocked by channel, time or rating.
2. Press **SELECT**. Enter your 4-digit PIN number on your Digital Remote when prompted.
3. This will disable all blocks (channel, time and rating). You can now watch the show you were trying to see, and any other show on any other channel.

### Unblocking Only One Channel

If the show you are trying to watch is blocked because of a channel block, you will be given these options when you try to unblock:

1. Press **A** to unblock only the channel you are watching.
2. Press **B** to unblock all channels.
3. Press **C** to Cancel.

### Disabling All Parental Controls at Once

1. There is also a quick way to disable all Parental Controls at once from any channel. Press **SETTINGS** at any time to display the **Quick Settings** menu.
2. Press the **UP** or **DOWN** arrows to find **Activate Parental Control**.
3. Press the **RIGHT** arrow to switch **YES** to **NO**.
4. Enter your PIN number when prompted.
5. All Channel, Time, Ratings and Title blocks are now disabled.

**Important:** Make sure you reactivate Parental Controls before your children watch TV.

### Reactivating Parental Controls

1. Press **SETTINGS** to return to the **Quick Settings** menu.
2. Press the **UP** or **DOWN** arrows to find **Activate Parental Control**.
3. Press the **LEFT** arrow to switch from **NO** to **YES**.
4. Enter your **PIN number** when prompted.

**Tip:** If you do forget to reactivate Parental Control, all blocks will automatically be activated the next time you turn your Digital SmartBox **OFF**, and then **ON** again.